...ufsen

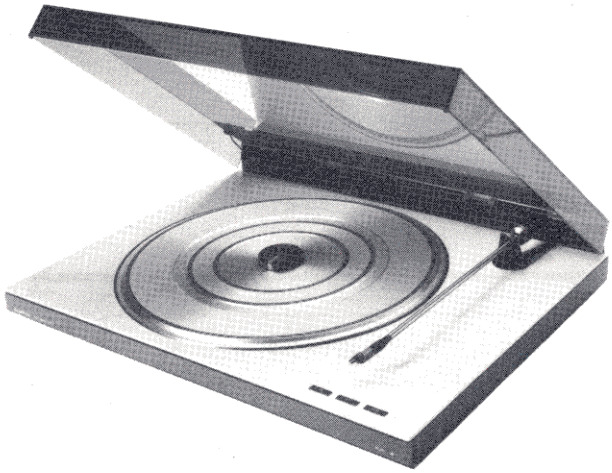

Beogram RX-2

Type 5831 - 5833 - 5835
Supplement for
Beogram 1800, 2000, 5000

SERVICEANVISNING
SERVICE MANUAL
SERVICE ANLEITUNG

0608690231

BEOGRAM RX-2, type 583X

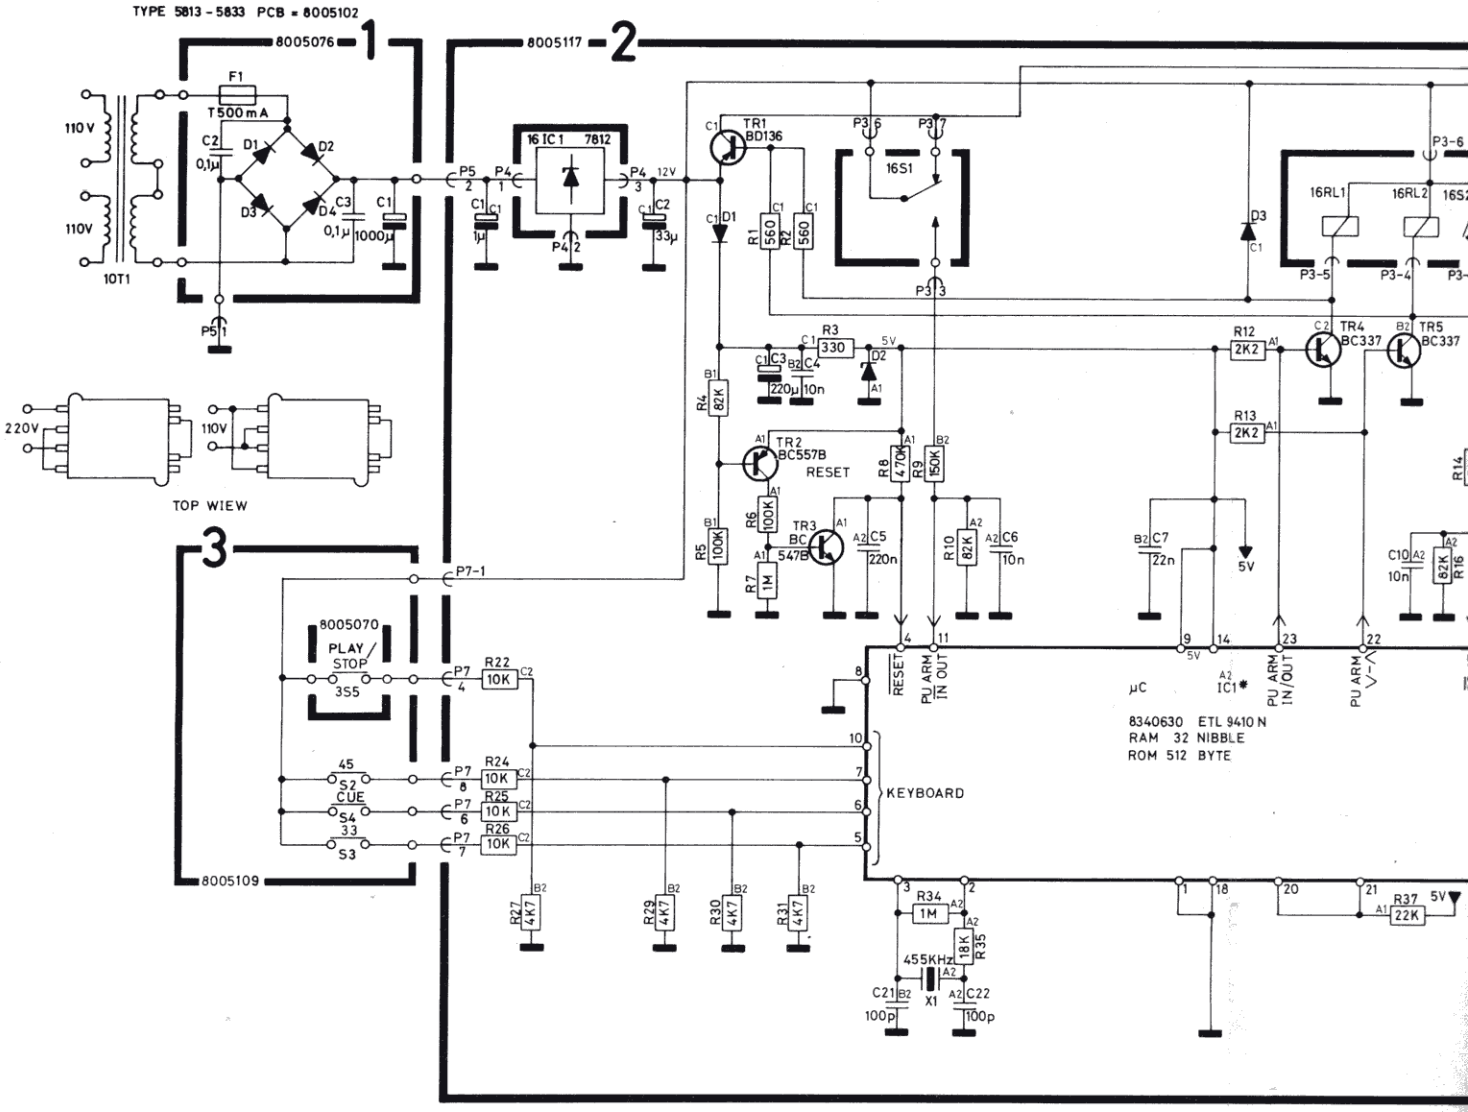

ACTIVATE		PLAY - STOP			CUE		CUE		PLAY - STOP			CUE	CUE		RUN OFF STOP		
17cm record on turntable		PU in 2.7-3sec.	PU down 1.8sec.	Playing	PU up 1.8sec.	Pause	PU down 1.8sec.	Playing	PU up 1.8sec.	PU out 2.7sec.	Stop	PU in 2.7-3sec.	PU down 1.8sec.	Playing	PU up 1.8sec.	PU out 2.7sec.	Stop
PU arm in/out output	PIN 23 (16RL1)																
30/17 cm. input	* PIN 13 (16S2)																
PU arm in/out input	PIN 11 (16S1)																
Lift/lower output	PIN 22 (16RL2)																
Lift/lower input	PIN 12 (16S3)																

* PIN 13 is constant low with 30 cm. record

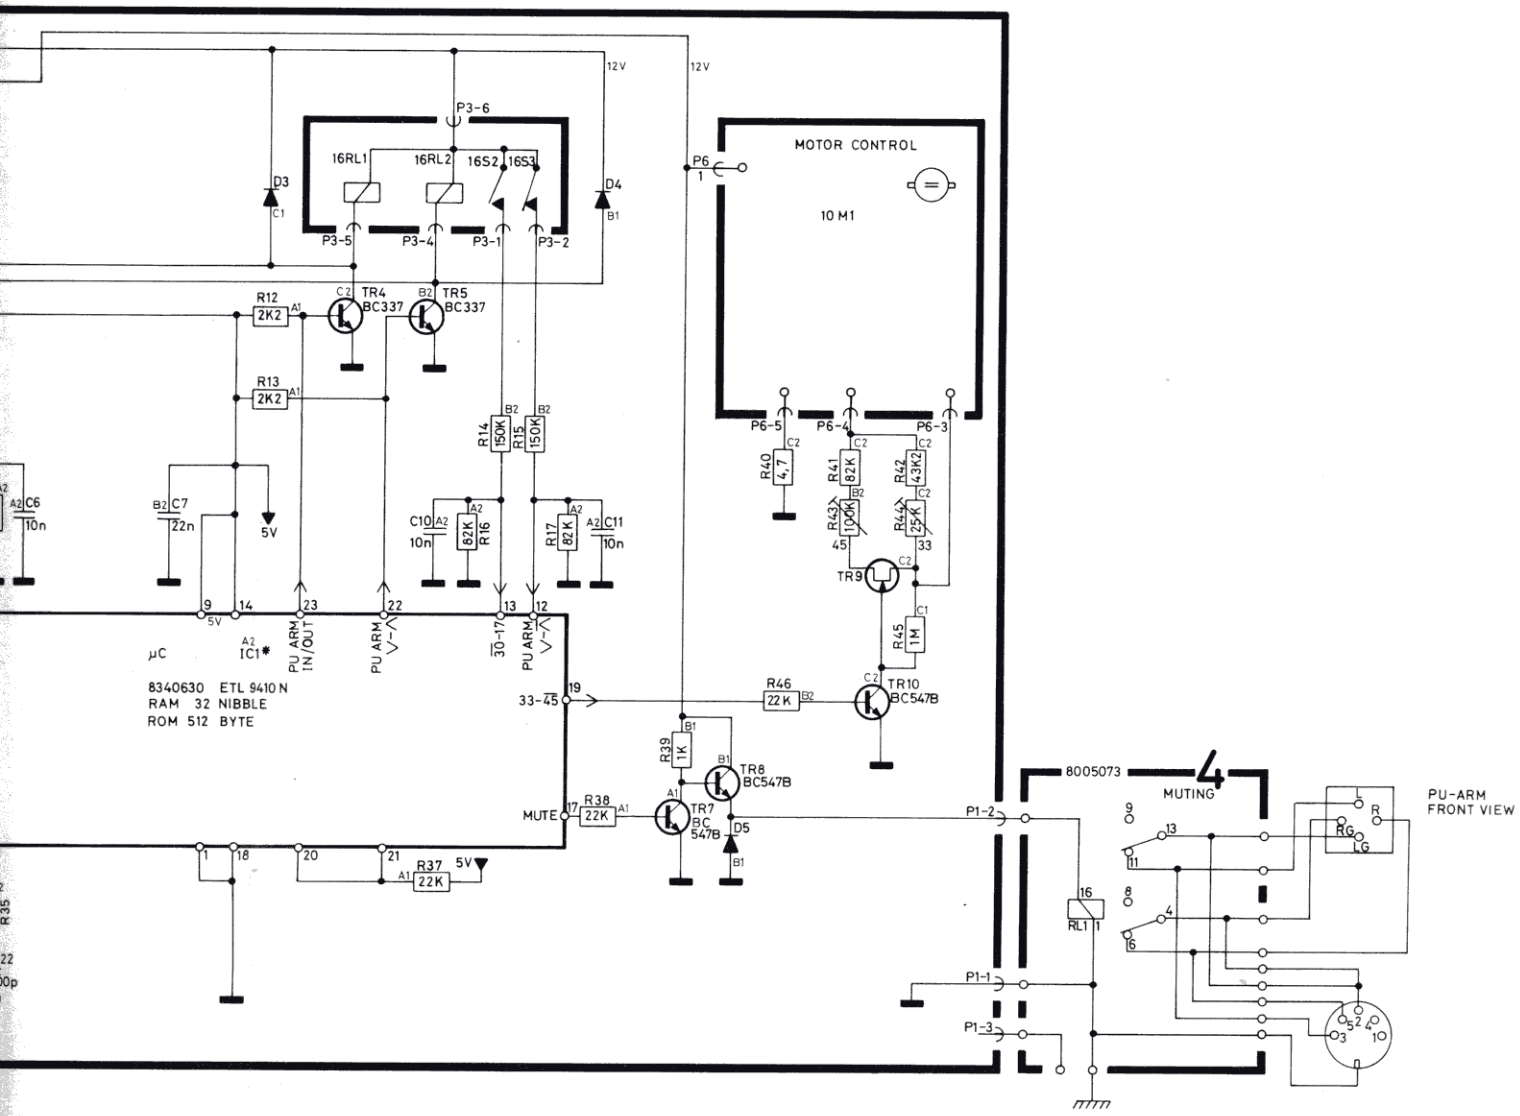

PLAY- STOP			CUE	CUE		RUN OFF STOP		
PU up 1.8sec.	PU out 2.7sec.	Stop	PU in 2.7-3sec.	PU down 1.8sec.	Playing	PU up 1.8sec.	PU out 2.7sec.	Stop

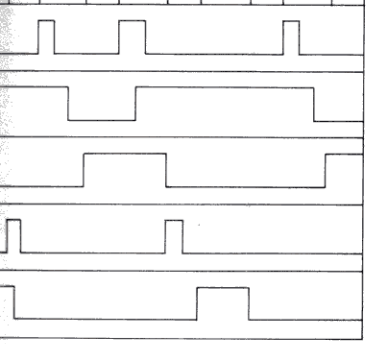

Explanation of the fuse symbols used in the set:

T500 mA 250 V — Replace with same type 500 mA-250 V Slow acting fuse.